



# Purelite Xstream


## LIGHTWEIGHT BATTERY POWERED AIRSHIELD



Woodworking and timber preparation - for protection against dust, flying particles, and preservatives



Food preparation and processing – for protection against powder inhalation and mixing splashing

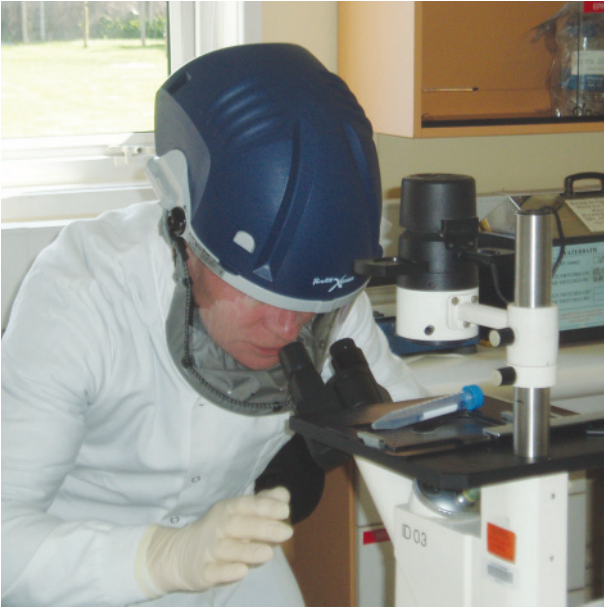

Laboratory procedures - protecting against ingestion and inhalation, and splashes to the face and eyes



Agrochemical industry - the application of fertilisers and pest control treatments, harvesting and packing

The new Purelite Xstream is a self-contained lightweight Powered Air Purifying Respirator (PAPR) providing all-in-one respiratory protection against dust, fumes and particulates, combined with eye and face protection against impact and liquid splash.

The integrated re-chargeable nickel metal hydride (NiMH) battery pack delivers a supply of clean air via a pair of high efficiency P2 particulate filters for up to 8 hours of continuous use.

There is no need for separate eye, face, and respiratory protection - the Purelite Xstream provides these safety requirements in one easily donned unit, combining comfort and economy.

# Purelite Xstream

**INTEGRATED EYE, FACE AND RESPIRATORY PROTECTION THAT IS EASIER AND MORE COMFORTABLE TO WEAR THROUGHOUT THE WORKING DAY**

- Certification Respiratory Protection AS/NZS 1716:2003 Class P2 and BS EN 12941:1999 TH2P Certification Eye/Face Protection AS/NZS 1337:1992 and BS EN 166:2002
- Low noise fan motor provides initial rate airflow of 210 lpm (150 lpm minimum at end of battery life). Low battery audible alarm.
- Lightweight 1.0kg (nominal) with easily adjusted headband to fit range of head sizes and for wear over protective clothing and hoods.
- Polycarbonate faceshield with nylon elasticated face seal-tinted and clear overlays are available for the faceshield.
- On-off switch easily operated with gloved hand.
- High efficiency P2 filter with Assigned Protection Factor (APF) of 20.



- Air flow indicator pre-checks battery and filter performance and condition
- Wide range of applications including - woodworking and pottery, craft design and technology, DIY and building maintenance, food preparation and processing, fitting and application of insulation, dental laboratories, horticulture and pest control



**Distributor:**  
 OTB Products Pty Ltd  
 Ph: 07 5525 2523  
 Web: [www.otbproducts.com.au](http://www.otbproducts.com.au)



**HELMET INTEGRATED SYSTEMS LTD**



Commerce Road, Stranraer, DG9 7DX Scotland, Tel: +44 (0) 1776 704421, Fax: +44 (0) 1776 706342, E-mail: [sales@helmets.co.uk](mailto:sales@helmets.co.uk)

[www.helmets.co.uk](http://www.helmets.co.uk)