



OTB
Purofo
Size 64-68cm
MADE IN AUSTRALIA

OTB
Purofo
Size 64-68cm
MADE IN AUSTRALIA
HEAT SHOCK PROTECTIVE
RESISTANCE
CLASS 1
CLASS 2
CLASS 3
CLASS 4
CLASS 5
CLASS 6
CLASS 7
CLASS 8
CLASS 9
CLASS 10
CLASS 11
CLASS 12
CLASS 13
CLASS 14
CLASS 15
CLASS 16
CLASS 17
CLASS 18
CLASS 19
CLASS 20
CLASS 21
CLASS 22
CLASS 23
CLASS 24
CLASS 25
CLASS 26
CLASS 27
CLASS 28
CLASS 29
CLASS 30
CLASS 31
CLASS 32
CLASS 33
CLASS 34
CLASS 35
CLASS 36
CLASS 37
CLASS 38
CLASS 39
CLASS 40
CLASS 41
CLASS 42
CLASS 43
CLASS 44
CLASS 45
CLASS 46
CLASS 47
CLASS 48
CLASS 49
CLASS 50
CLASS 51
CLASS 52
CLASS 53
CLASS 54
CLASS 55
CLASS 56
CLASS 57
CLASS 58
CLASS 59
CLASS 60
CLASS 61
CLASS 62
CLASS 63
CLASS 64
CLASS 65
CLASS 66
CLASS 67
CLASS 68
CLASS 69
CLASS 70
CLASS 71
CLASS 72
CLASS 73
CLASS 74
CLASS 75
CLASS 76
CLASS 77
CLASS 78
CLASS 79
CLASS 80
CLASS 81
CLASS 82
CLASS 83
CLASS 84
CLASS 85
CLASS 86
CLASS 87
CLASS 88
CLASS 89
CLASS 90
CLASS 91
CLASS 92
CLASS 93
CLASS 94
CLASS 95
CLASS 96
CLASS 97
CLASS 98
CLASS 99
CLASS 100

OTB
Purofo
Size 64-68cm
MADE IN AUSTRALIA

OTB
ONLY THE BEST PRODUCTS

OTB PRODUCTS PTY LTD
p: 1300 310 210
e: sales@otbproducts.com.au
w: www.otbproducts.com.au
a: 32 / 30 Mudgeeraba Road, Mudgeeraba, QLD, 4213

TABLE OF CONTENTS

Air Blowers 2

AIR BLOWERS

Air Blower

Allegro's lightweight compact air blowers are proving extremely popular right across industry and local councils. [OTB Products](#) supply direct or through distributors around Australia and New Zealand a range of Axial and Venturi Blowers that are proving to be a popular choice based on both reliability and performance.



PLASTIC COM-PAX-IAL ALLEGRO BLOWER SYSTEM WITH MVP

The complete Plastic Com-Pax-Ial Allegro Blower system with MVP includes everything you'll need for your site. Included is the lightweight plastic blower, six feet and fifteen feet of ducting with a storage bag, and MVP (Manhole Ventilation Pass Thru). The Manhole Ventilation Pass Thru (MVP) is designed to maintain and redirect air flow with...

[Read More](#)

SKU: A9520-36M

Price: \$1,525.60 - \$2,769.30

LOW PRESSURE AIR PUMP SYSTEM



Our Full Mask Systems provide a portable air source for one, two or three respirator users. They include one, two or three full mask supplied air respirators, a 1/4 hp, 3/4 hp or 1-1/2 hp breathing air pump, and one, two or three 50 or 100-foot breathing air hose(s).

This item includes 1-Worker Full Mask System with a 50' Hose. Please...

[Read More](#)

SKU: N/A

Price: \$3,105.00



LIGHTWEIGHT PLASTIC VENTURI BLOWERS

The plastic Venturi Blowers are a perfect solution to moving air in refineries, utility and power plants, shipyards, paper and pulp plants, the marine and steel industry and manhole operations. Anywhere where fumes may be poisonous, explosive or hazardous from process towers, tanks, large pipes or confined space need to be removed. You can cool...

[Read More](#)

SKU: A9518-13

Price: \$514.10 - \$1,127.65



CENTRIFUGAL AIR BLOWER

Perfect for remote locations where electricity is unavailable, this Briggs & Stratton gasoline-powered 5 hp blower offers high flow rates. The 8" ports and steel guards provide safety and the polyethylene housing with a built-in handle offers durability and convenience during transport. It is designed with a sturdy metal base that...

[Read More](#)

SKU: N/A

Price: \$2,518.10



AXIAL BLOWER STANDARD METAL

Designed for applications requiring a maximum amount of output. Housing is made from 16 gauge cold rolled steel and powder coated in a "safety orange" color that holds a three-blade impeller. It features an interchangeable flange for intake or exhaust mounting, integrated carry handles for easy transport, a steel/zinc plated grill and 4...

[Read More](#)

SKU: N/A

Price: \$3,426.85



ALLEGRO METAL VENTURI BLOWERS

Allegro Metal Venturi Blowers use compressed air or saturated steam as the power source. Small volumes of high velocity air (from the compressed air source) run through the casting and out the nozzle jets, creating a venturi action or pulling action that creates large volumes of air through the venturi and out the air diffuser. A 1/2" hose...

[Read More](#)

SKU: A9518

Price: \$497.50 - \$1,013.40

ALLEGRO DC AIR BAG BLOWER SYSTEM



This lightweight Allegro DC Air Bag Blower System features a super quiet metal 12" (30.4 cm) axial DC blower with 25' (7.62 m) ducting built into a heavy duty bag for an all-in-one ease of operation. Designed with zippered ends that allow blower use without removing blower from the bag. Zipper openings allow for cord inlet and outlet. Easy...

[Read More](#)

SKU: A9535-12LDC

Price: \$1,654.95




ALLEGRO BREATHING AIR BLOWER

Our Breathing Air Blower is a portable, lightweight, fresh air supply system that provides safe and comfortable breathing air for industrial users who require an OSHA compliant fresh air supply system while maximizing productivity. While our Breathing Air Blower improves the worker's safety and comfort, it also helps reduce their frequency...

[Read More](#)

SKU: A9815-EF

Price: \$829.15

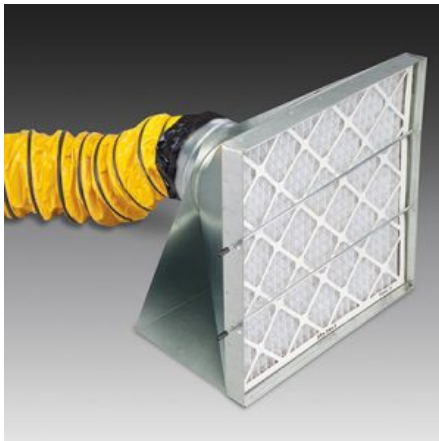

ALLEGRO BLOWER FILTER BOX

Hook up your existing blower with 8" ducting to the back of the Allegro Blower Filter Box. It filters the ambient air from or to the blower through the Filter Box. It can be attached on either inlet or outlet side of the blower for positive or negative filtration. The galvanized sheet metal box filters particulates and dust and can be...

[Read More](#)

SKU: A9500-34

Price: \$624.55

ALLEGRO 12" HIGH OUTPUT BLOWER



[Read More](#)

SKU: A9509-50AU

Price: \$2,056.25

ALLEGRO 12" AXIAL EXPLOSION PROOF (EX) BLOWER



This Allegro 12" Explosion Proof (EX) Plastic Blower is designed for easy use and storage without sacrificing airflow. This unit is available as a blower only or complete with 15' (4.57m) or 25' (7.62m) of ducting and a storage canister. Currently in stock with Canister and 25' Ducting. The Canister attaches to the intake or the output of the...

[Read More](#)

SKU: A9539-12EX

Price: \$2,951.69



50CM HIGH OUTPUT EX BLOWER

For use in applications requiring a large amount of output in a hazardous location environment. Allegro's 50cm High Output EX Blower, standard High Output Blower and large Axial Fan are rugged to suit most applications.

[Read More](#)

SKU: A9525-50

Price: \$2,553.70 - \$5,538.60



30CM PLASTIC AXIAL BLOWER WITH CANISTER

Allegro 30cm Plastic Axial Blower with Canister Please call 1300 310 210 to discuss your requirements, This Allegro 30cm Plastic Axial Blower with Canister is available with either 4.6m or 7.62m ducting. The polyethylene housing and canister assembly are designed to be both lightweight and super quiet. Made of corrosion, UV and chemical...

[Read More](#)

SKU: A9543-25AU

Price: \$1,641.70



20CM PLASTIC EXPLOSION PROOF COM-PAX-IAL BLOWER WITH DUCTING

20cm Plastic Explosion Proof Com-Pax-Ial Blower with Ducting has an Electric, explosion-proof motor that is UL/CSA listed. Single-phase motor includes NEMA rated 115V plug for use with explosion-proof socket (sold separately). Meets Class I, Divisions 1 and 2, Groups C and D and Class II, Divisions 1 and 2, Groups F and G Hazardous Location...

[Read More](#)

SKU: A9538

Price:



20CM DC COM-PAX-IAL BLOWER

The Allegro 20cm DC COM-PAX-IAL blower can run off a truck battery when you're on the road. This high output compact axial blower is designed for easy use and storage without sacrificing airflow. Canister attaches to intake or output of blower for suction or ventilation. Allegro DC blowers are designed to be used with standard car or...

[Read More](#)

SKU: A9536

Price: \$892.15 - \$958.50



20CM AC PLASTIC COM-PAX-IAL REVERSIBLE BLOWER

This Allegro 20cm AC Plastic COM-PAX-IAL Reversible Blower is a versatile system featuring the 20cm COM-PAX-IAL blower with canister and ducting. This lightweight unit is designed with the quick-connect clipping system which allows workers to attach the canister, tools-free, to the input side for powerful extraction or output side for...

[Read More](#)

SKU: A9533-25AU

Price: \$626.85 - \$968.45



20CM AC AXIAL BLOWER WITH CANISTER (COPY)

20cm AC Axial Blower with Canister and 7.5m Ducting

Engineered for convenience, this 8" axial blower is an all-in-one ventilation system. The design allows ducting to collapse into a built-in canister for easy storage. The unit can also be stored vertically to use a minimum amount of space. Includes blower, built-in storage...

[Read More](#)

SKU: A9514

Price: \$1,426.10 - \$1,757.75



20CM AC AXIAL BLOWER

This Allegro 20cm AC Axial Blower is available with Canister and 7.5m Ducting or just the Blower on its own

The 20cm AC Axial Blower offers high output from a compact axial blower. It is designed for easy use and storage without sacrificing airflow.

Engineered for convenience, this 8" axial blower is an all-in-one...

[Read More](#)

SKU: A9514

Price: \$1,426.10 - \$1,757.75

INDEX

2

- 20cm AC Axial Blower 11
- 20cm AC Axial Blower with Canister (Copy) 10
- 20cm AC Plastic COM-PAX-IAL Reversible Blower 10
- 20cm DC COM-PAX-IAL Blower 9
- 20cm Plastic Explosion Proof COM-PAX-IAL Blower with Ducting 9

3

- 30cm Plastic Axial Blower with Canister 8

5

- 50cm High Output EX Blower 8

A

- Allegro 12" Axial Explosion Proof (EX) Blower 7
- Allegro 12" High Output Blower 7
- Allegro Blower Filter Box 6
- Allegro Breathing Air Blower 6
- Allegro DC Air Bag Blower System 5
- Allegro Metal Venturi Blowers 5
- Axial Blower Standard Metal 4

C

- Centrifugal Air Blower 4

L

- Lightweight Plastic Venturi Blowers 3
- Low Pressure Air Pump System 3

P

- Plastic Com-Pax-Ial Allegro Blower System with MVP 2



OTB

ONLY THE BEST PRODUCTS

OTB PRODUCTS PTY LTD

p: 1300 310 210

e: sales@otbproducts.com.au

w: www.otbproducts.com.au

a: 32 / 30 Mudgeeraba Road, Mudgeeraba, QLD, 4213